 
## ! INFO!

Do not charge the battery of the towing vehicle and/or towed vehicle directly via the socket.





**SPARE PARTS** 

www.ecs-electronicsuk.co.uk





Partnr.: AU-056-B1U

**User Guide** 


Only for models without towbar preparation








© ECS Electronics B.V. www.ecs-electronicsuk.co.uk AU-056-B1U / 190216TT © ECS Electronics B.V. www.ecs-electronicsuk.co.uk Revision: 0 AU-056-B1U / 190216TT

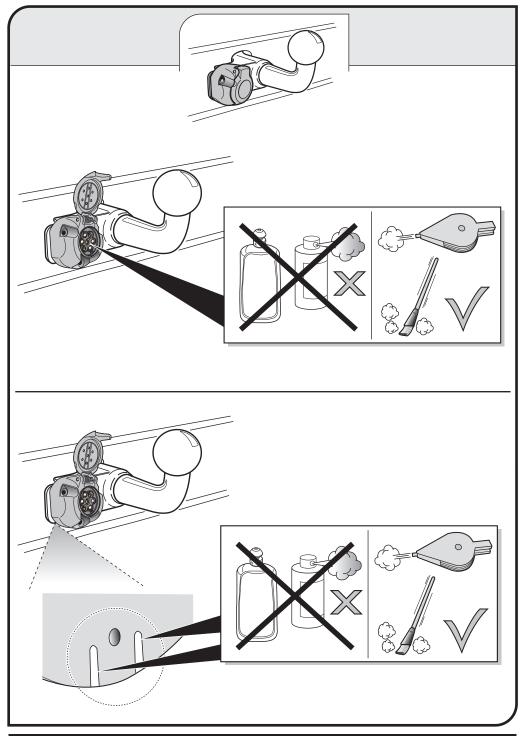


© ECS Electronics B.V. www.ecs-electronicsuk.co.uk Pag. 2 AU-056-B1U / 190216TT © ECS Electronics B.V. www.ecs-electronicsuk.co.uk Pag. 7 AU-056-B1U / 190216TT

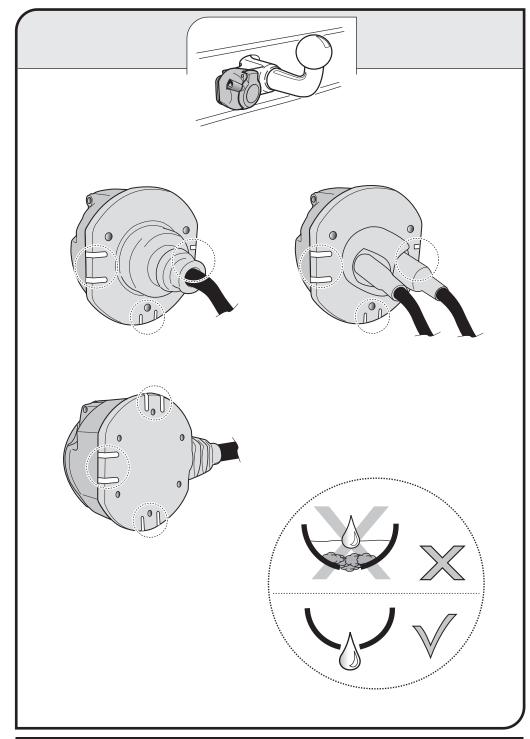

© ECS Electronics B.V. www.ecs-electronicsuk.co.uk Pag. 6 AU-056-B1U / 190216TT © ECS Electronics B.V. www.ecs-electronicsuk.co.uk Pag. 3 AU-056-B1U / 190216TT

## **SOCKET CONNECTION**

 DIN/ISO 1724	<b>\( \psi\)</b>	<b>◆</b> ()≢	≟1-7	♦	-\̈́\.	STOP	-¦Ç-
	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L
Pmax	21W	21W		21W	42W	3x21W	42W
Colour	Black/ White	Blue	Brown	Black/ Green	Grey/ Red	Black/ Red	Grey/ Black




In a coupled trailer with working fog lamp, the fog lamp of the vehicle will be switched off, if applicable.






 
The flashing lights on the trailer are monitored. If one of the indicators of the trailer breaks down, a buzzer will be audible and/or a visual signal will be visible on the dashboard. Check the flashing lights on the trailer.




The wiring kit has a possibility to switch off any ParK Distance Control in the case of a coupled trailer.

## CHANGING THE FUSE

 

 



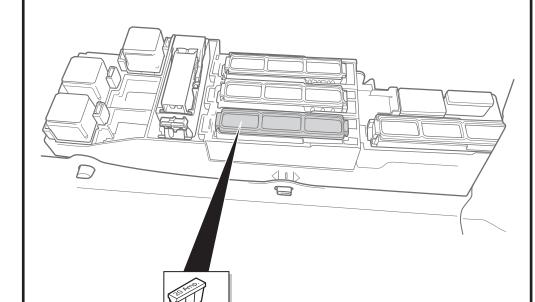

20 Amp.

Pos. 2

© ECS Electronics B.V. www.ecs-electronicsuk.co.uk Pag. 4 AU-056-B1U / 190216TT © ECS Electronics B.V. www.ecs-electronicsuk.co.uk Pag. 5 AU-056-B1U / 190216TT