



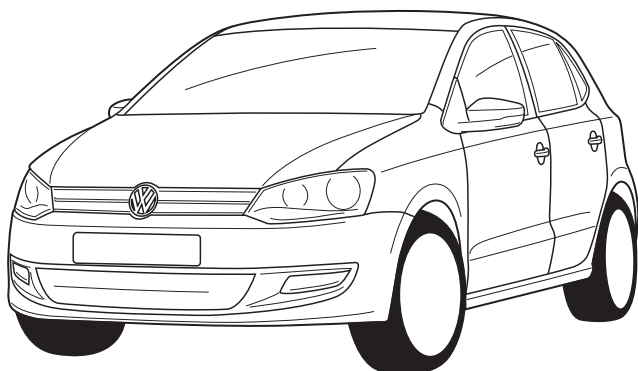

**VOLKSWAGEN Polo 2009- 3drs /
VOLKSWAGEN Polo 2009- 5drs /
VOLKSWAGEN Polo 2009- Cross**



Partnr.: SE-026-B1U

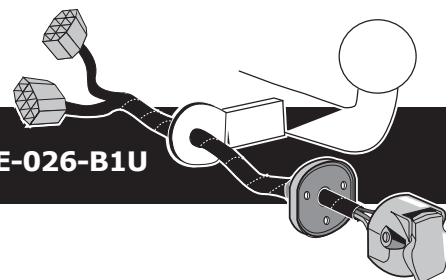


- Fitting instructions electric wiring kit tow bar with 12-N socket up to DIN/ISO Norm 1724.
- We would expressly point out that assembly not carried out properly by a competent installer will result in cancellation of any right to damage compensation, in particular those arising by virtue of the product liability act.
- Contents of these kits and their fitting manuals are subject to alteration without notice, please ensure that these instructions are read and fully understood before commencing installation.
- Do not overload circuits; the maximum loads per connection are detailed in this manual.
- Attention! Before Installation, please read this manual carefully and inform your customer to consult the vehicle owners manual to check for any vehicle modifications required before towing.
- In the event of functional problems, troubleshooting must be limited to about 0.5 hours, contact the technical support:
t.skinner@ecs-electronics.com / 07440 202 052.




Part list

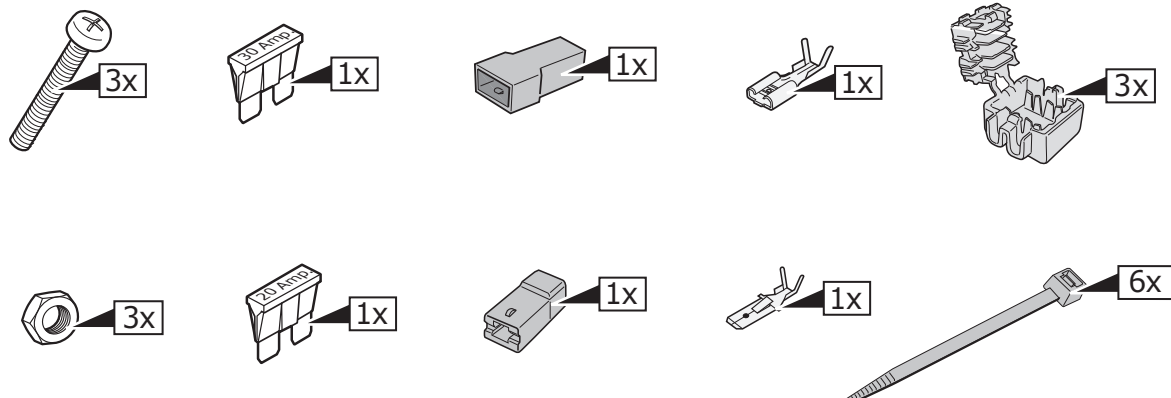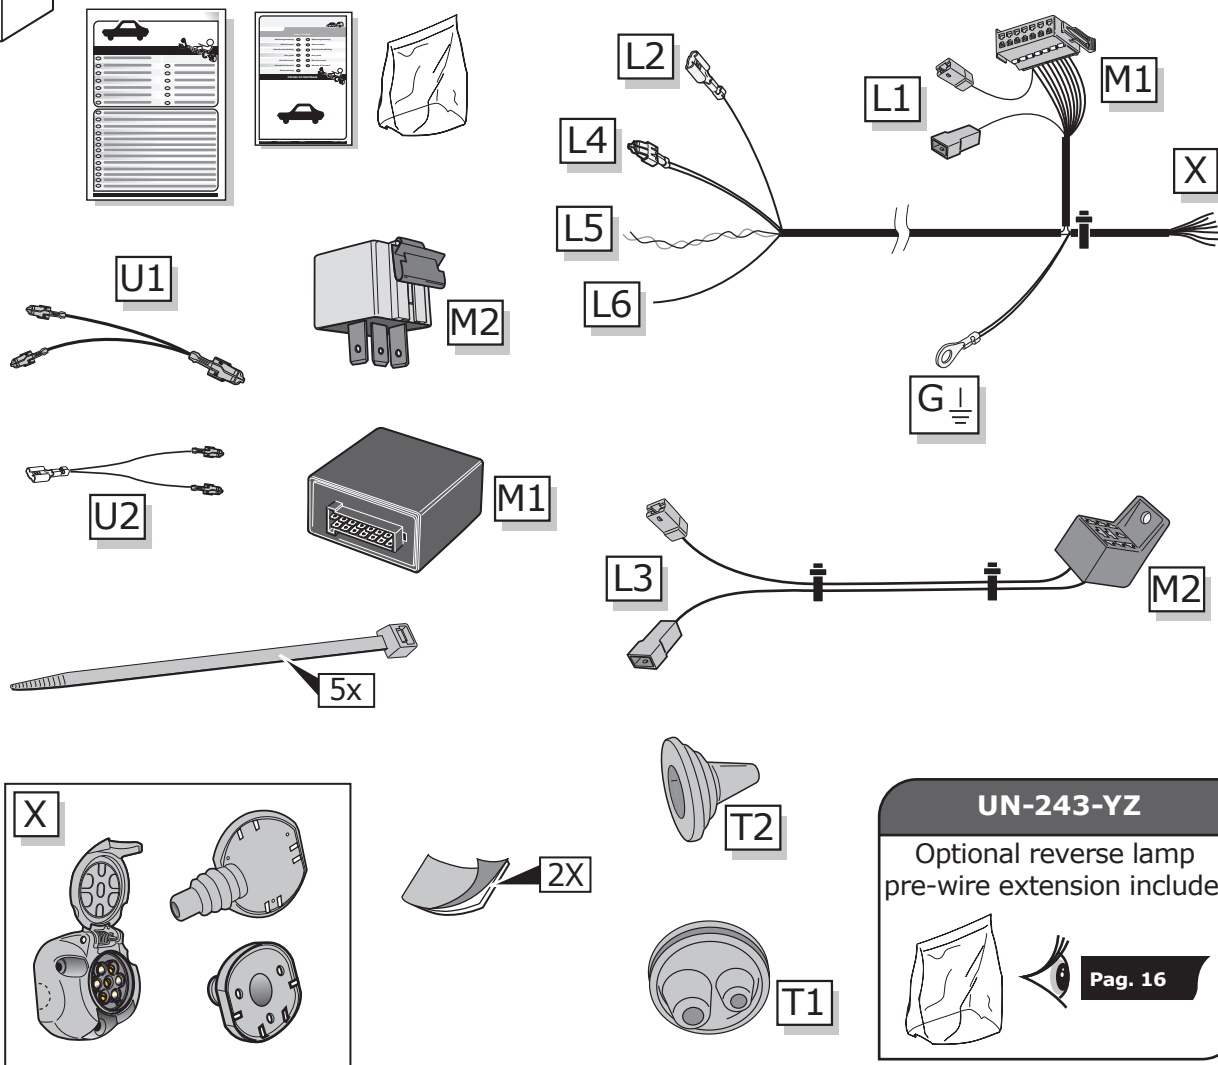


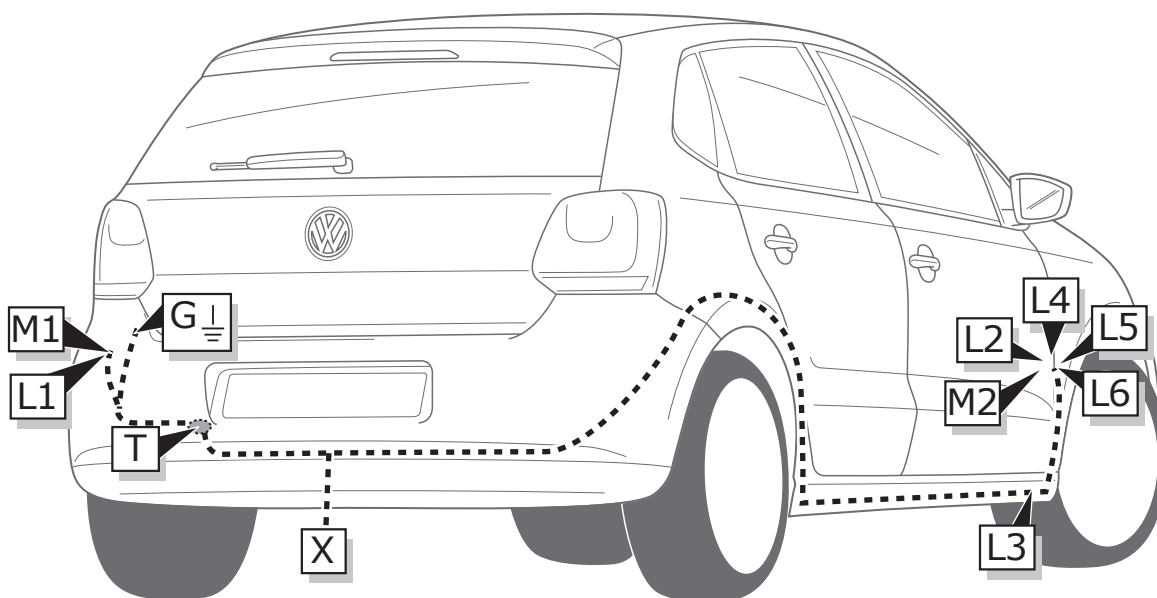


1

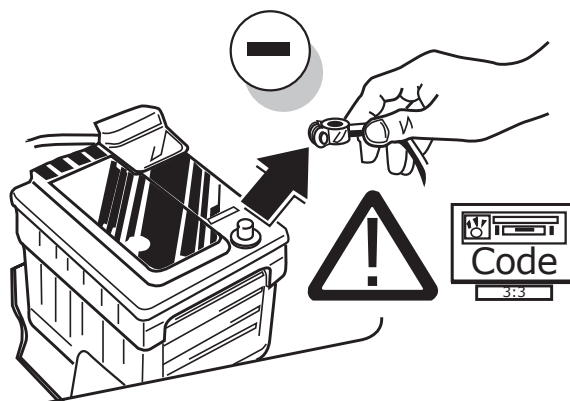

2


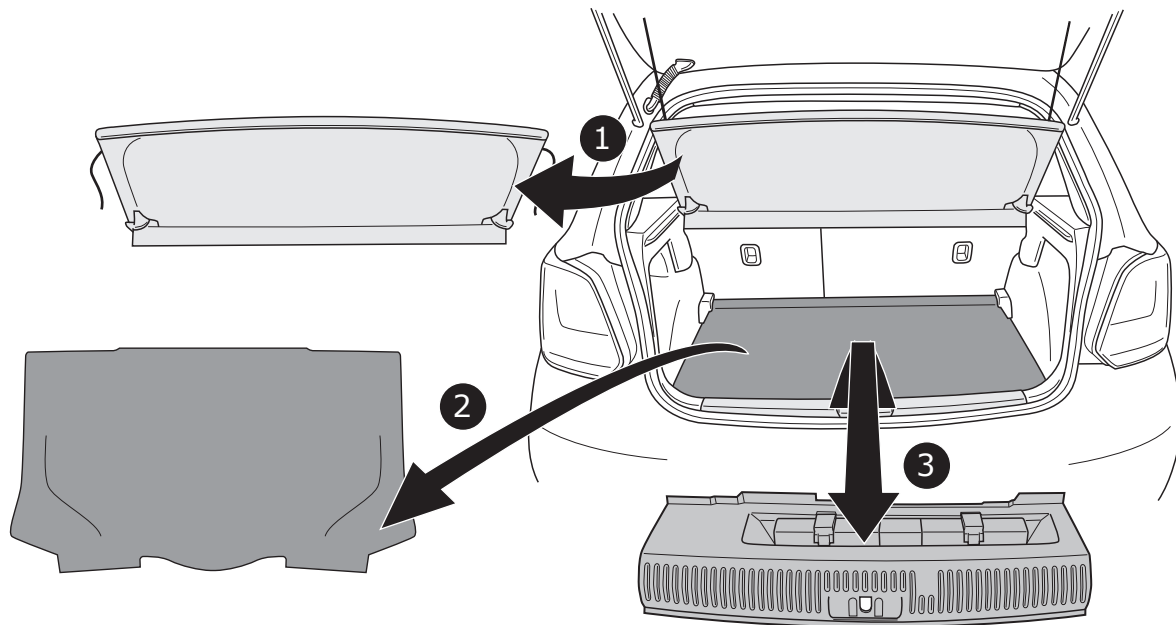


3

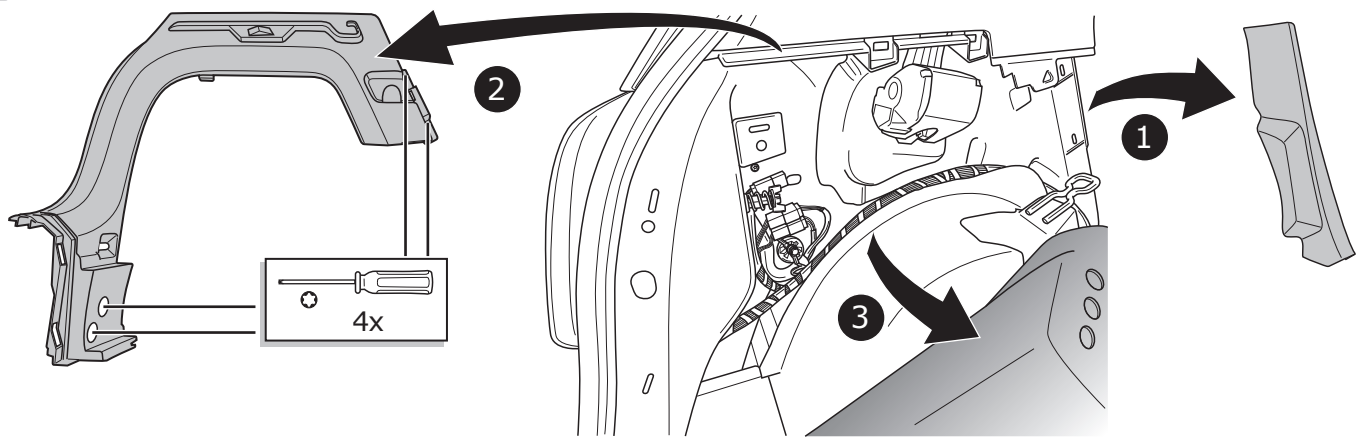





4

OPTION 1

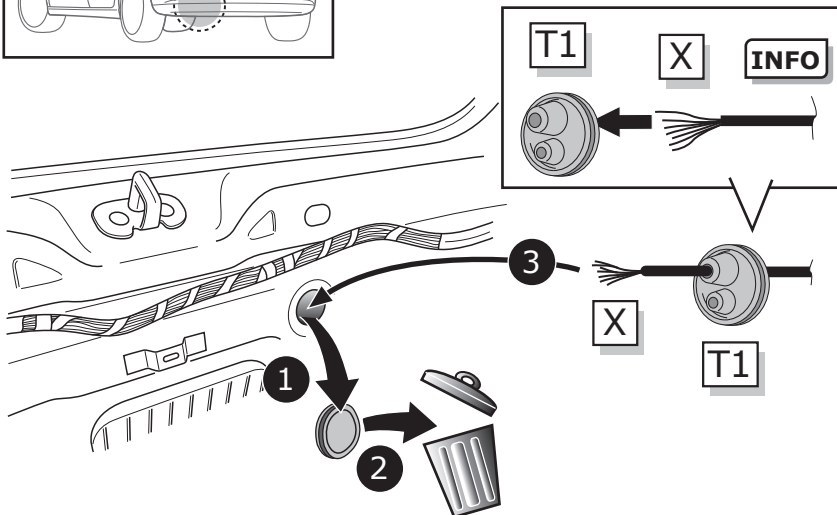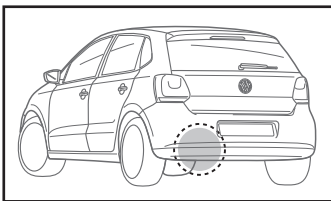



OPTION 2




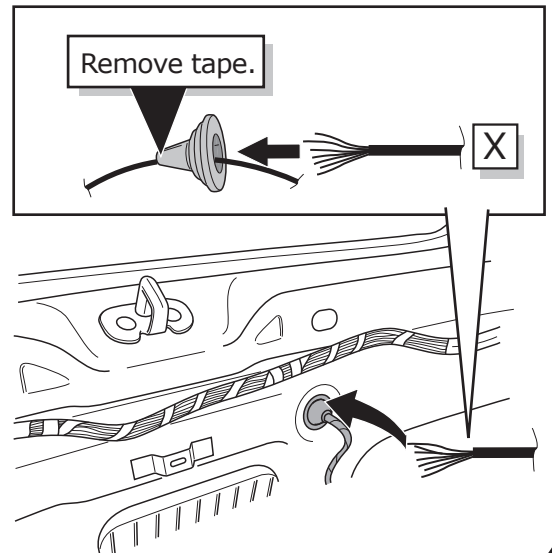


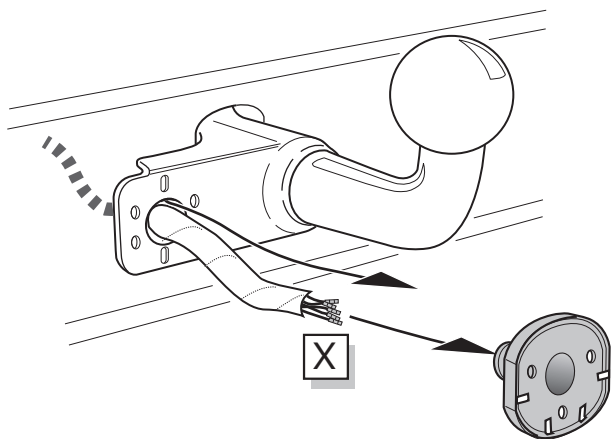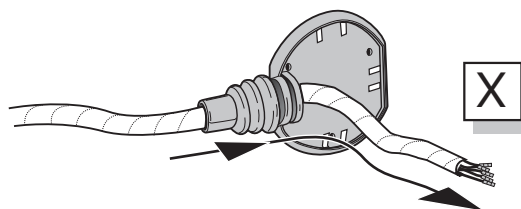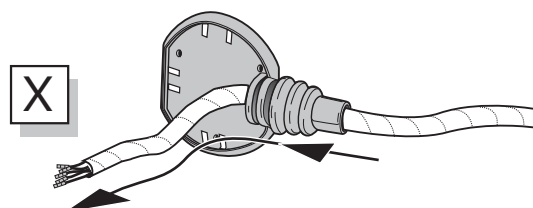A**Option 1****Option 2****Option 3****INFO**



SOCKET CONNECTION 

Pag. 15

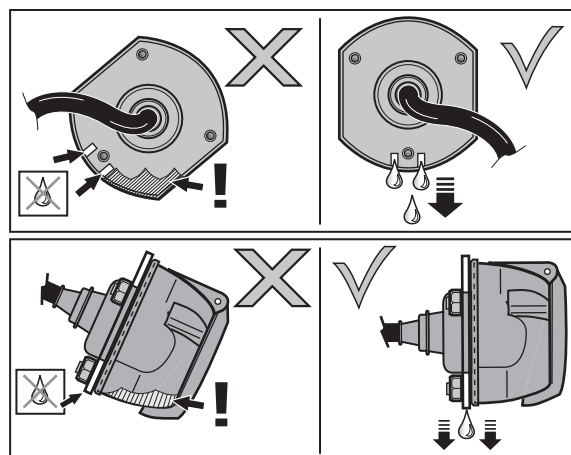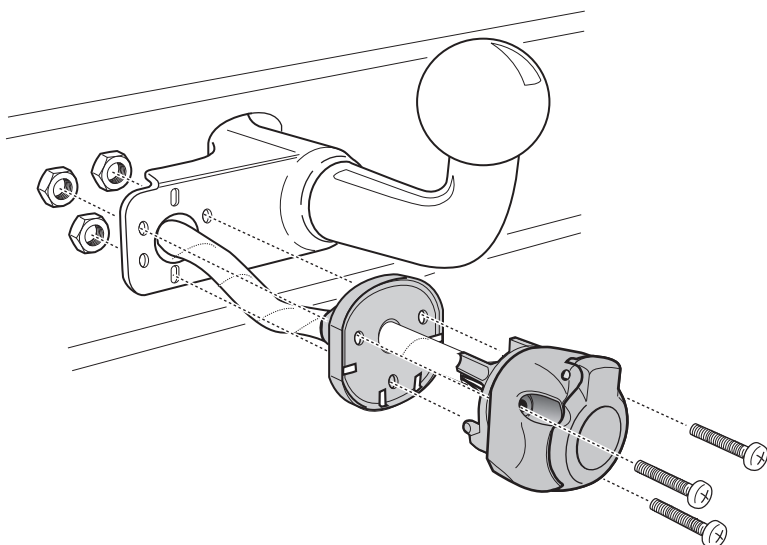
B**Option 1**

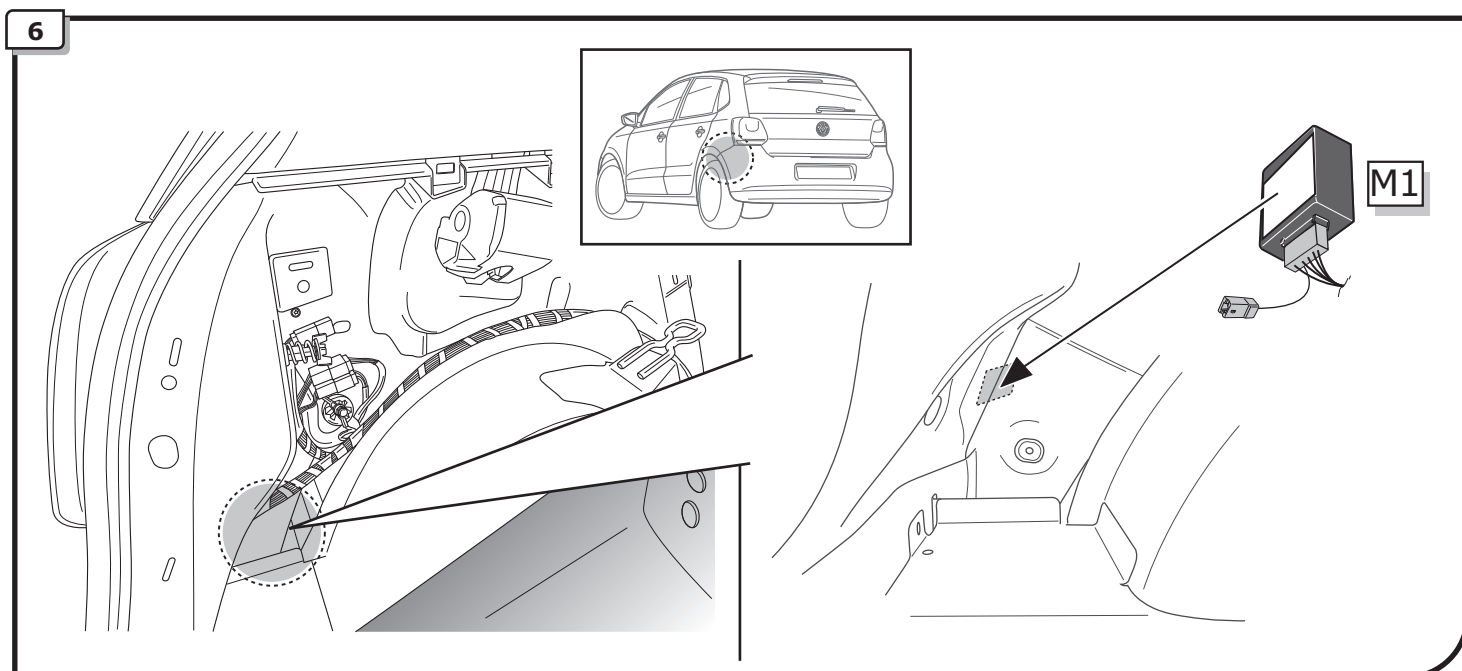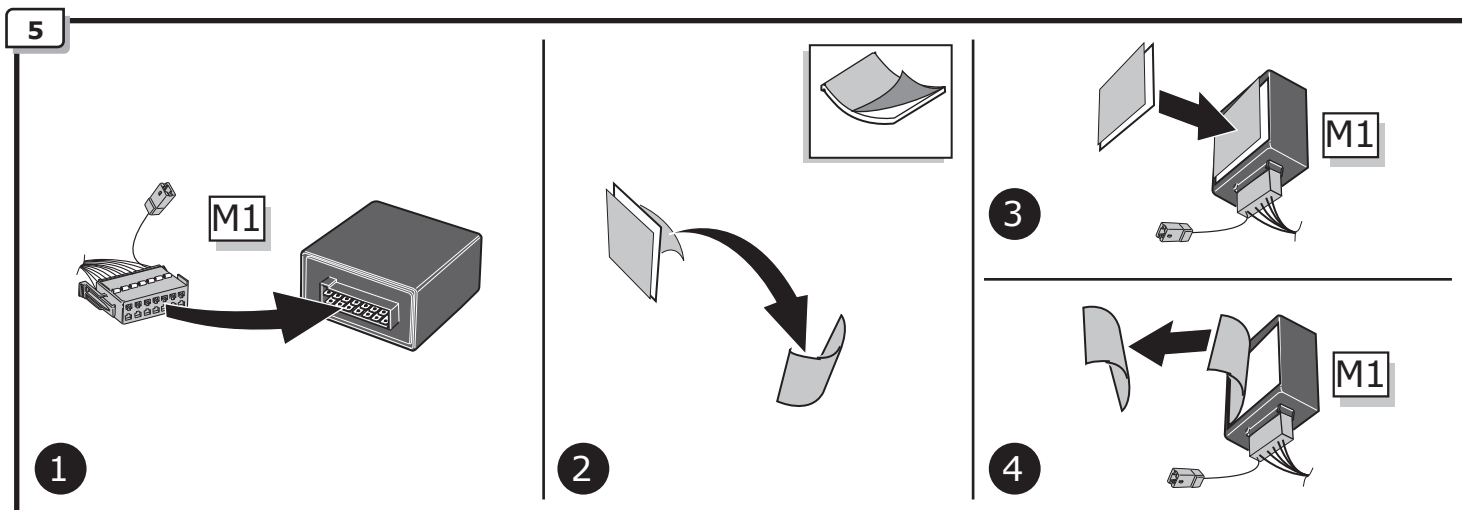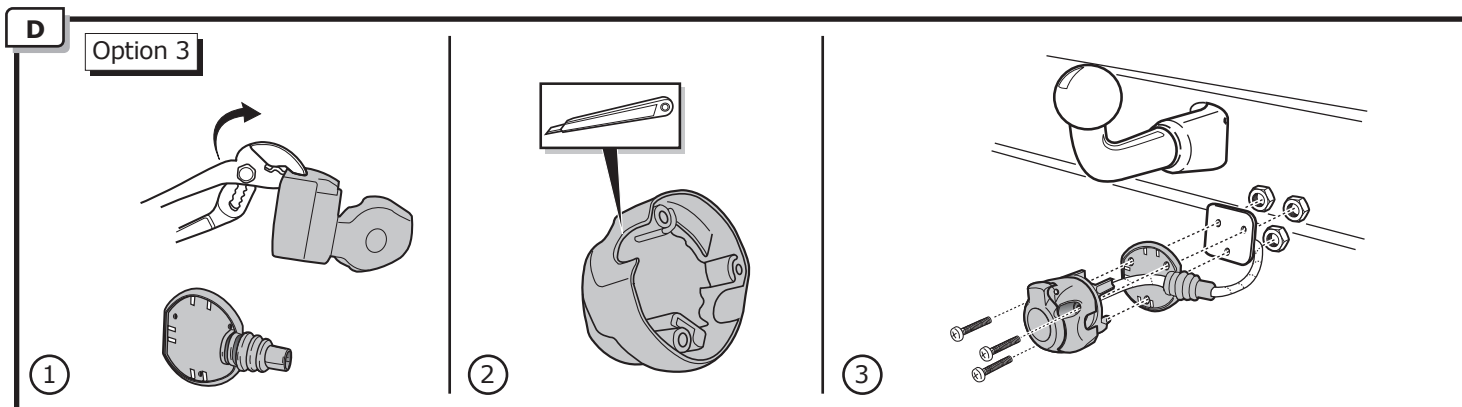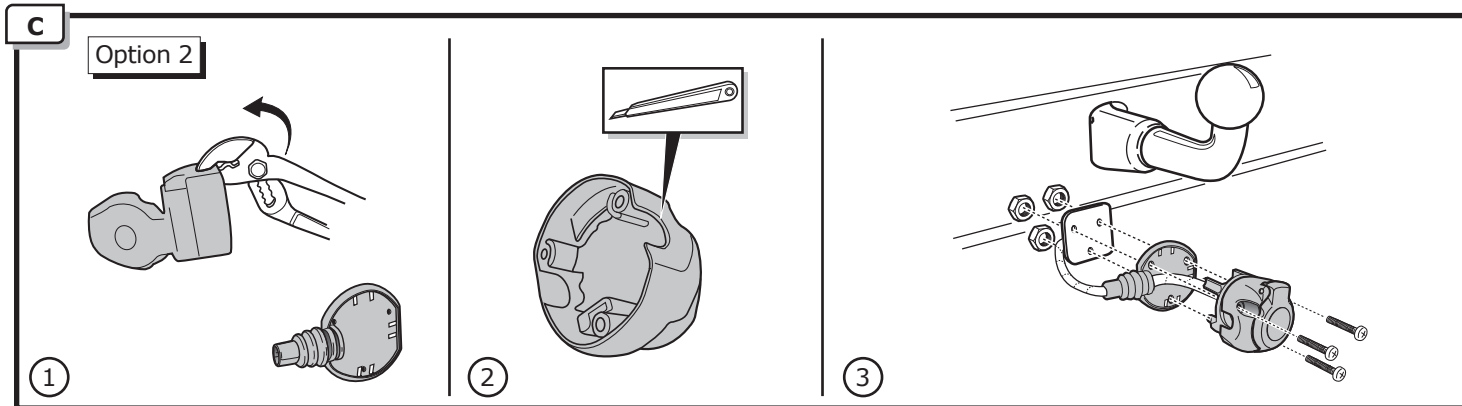


7

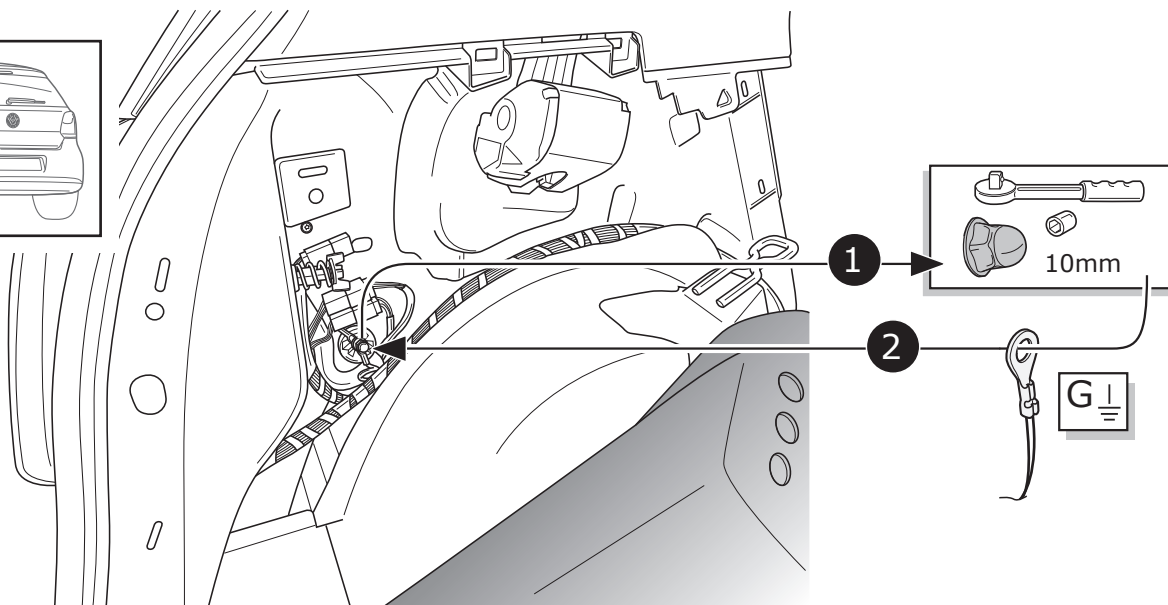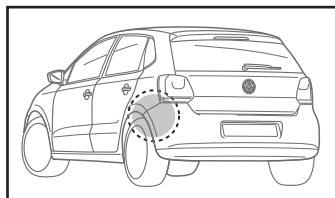

8

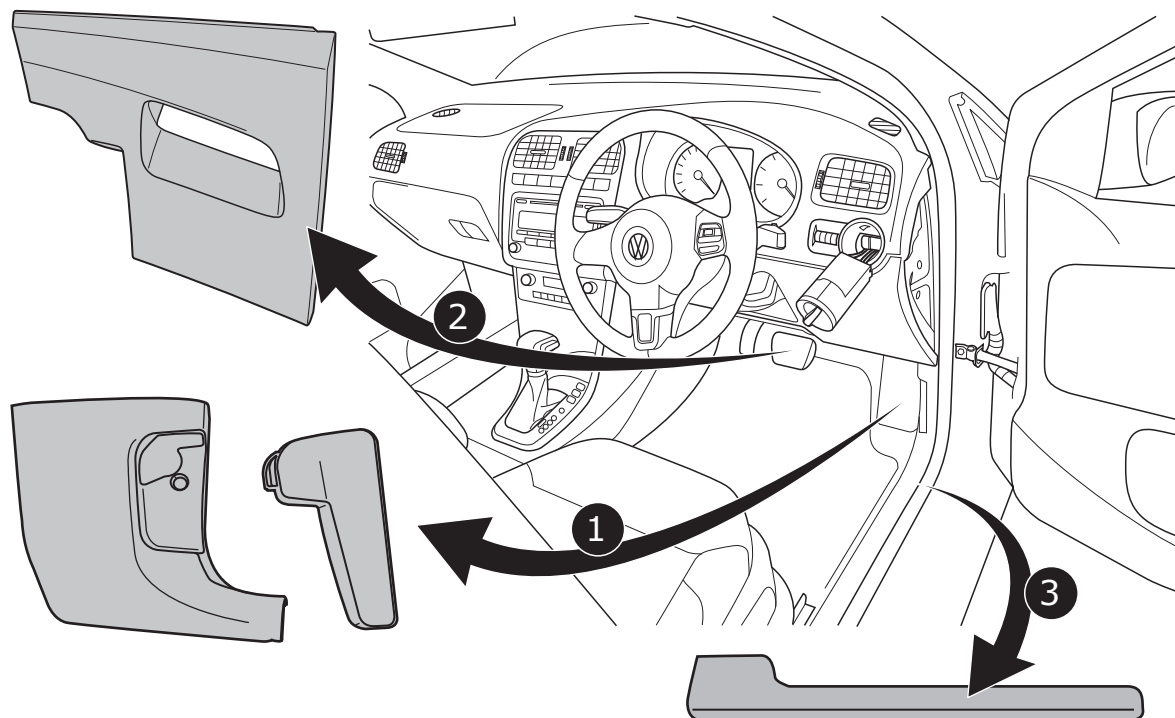

9

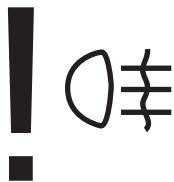

OPTION A for vehicles with Start & Stop/Automatic Lighting:
fog lamp connection by CAN-Bus







OPTION B for standard vehicles:
fog lamp connection by relay





INFO


OPTION A

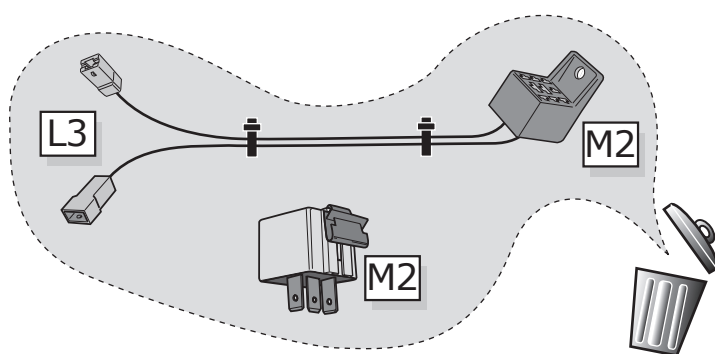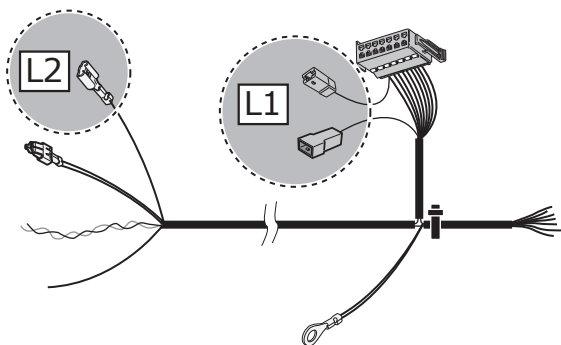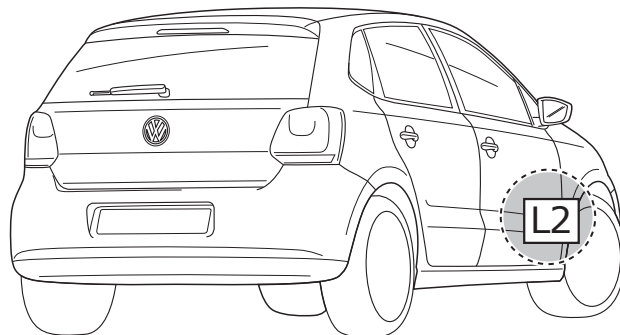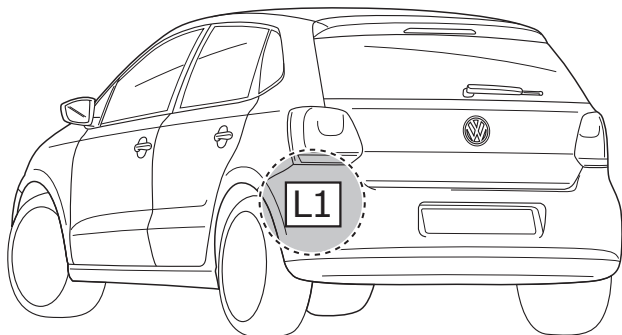

10

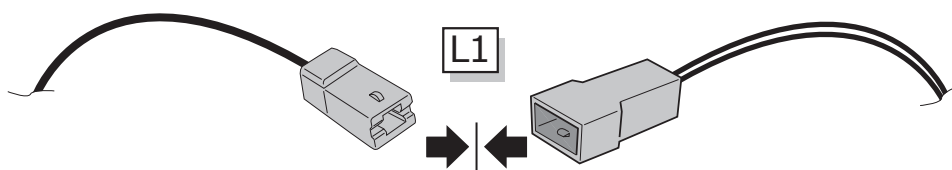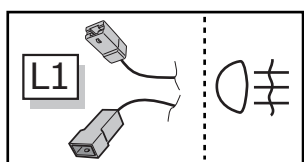


11


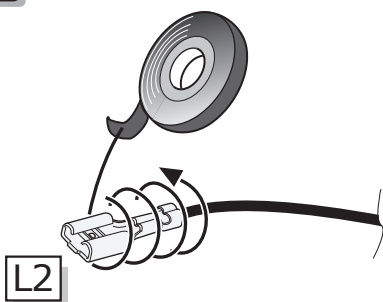


1





2



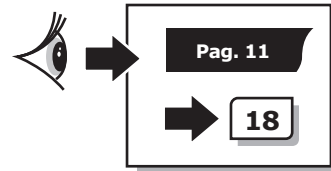


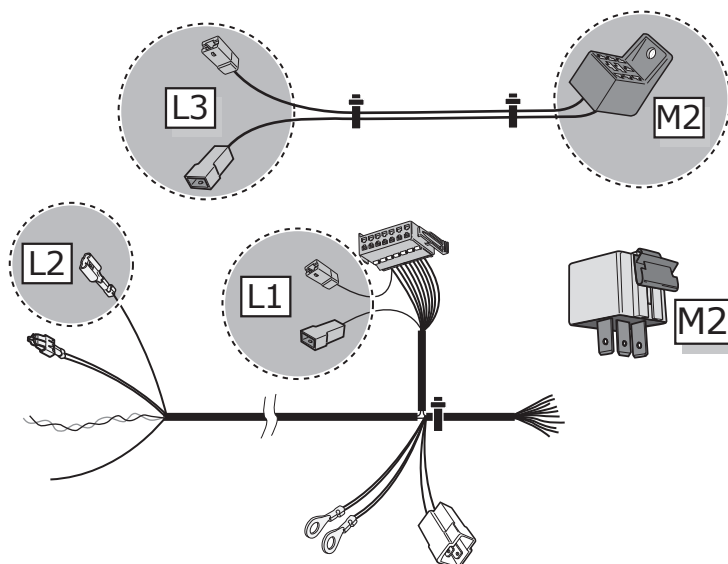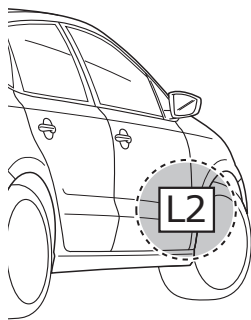

12

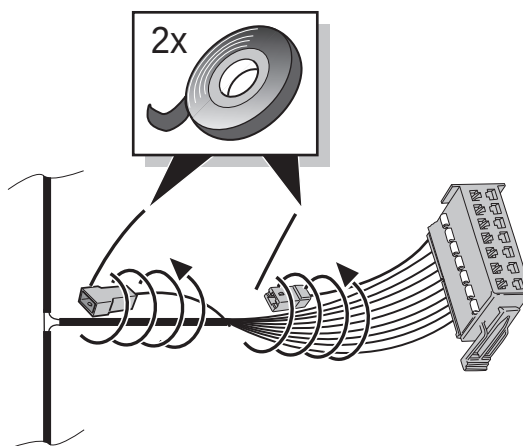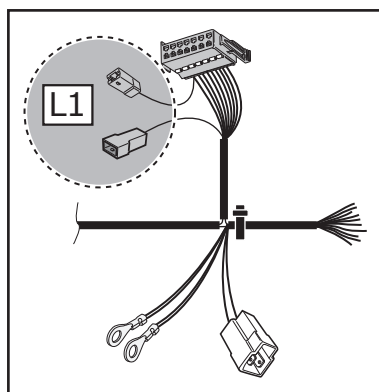


13

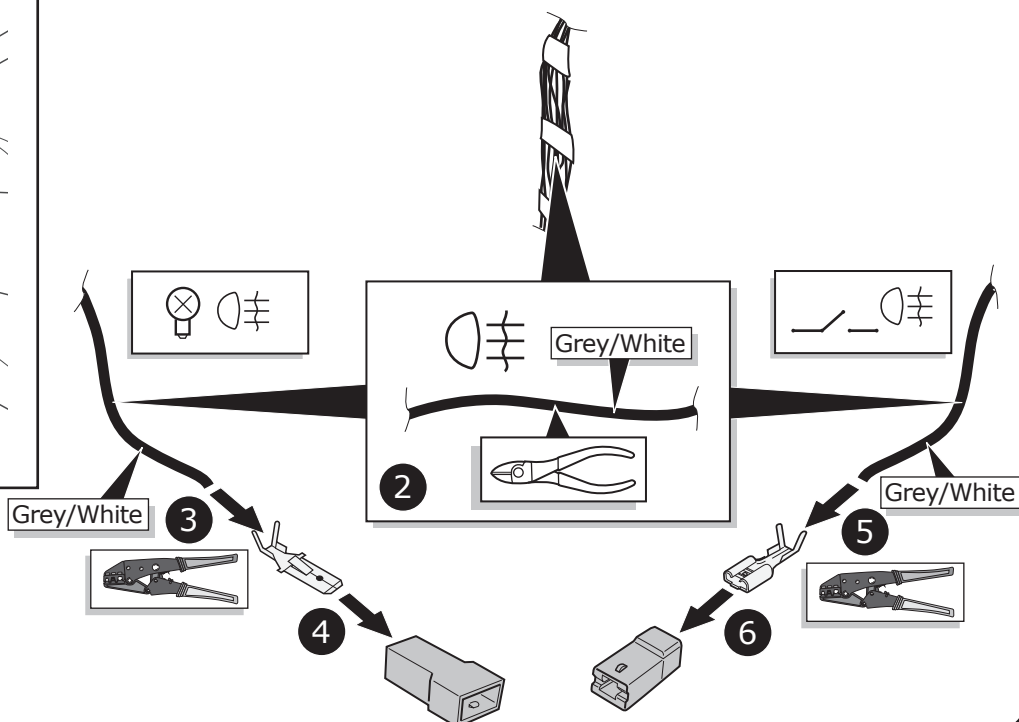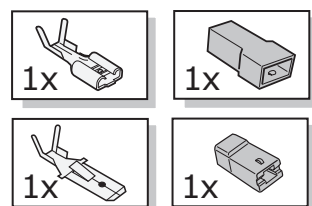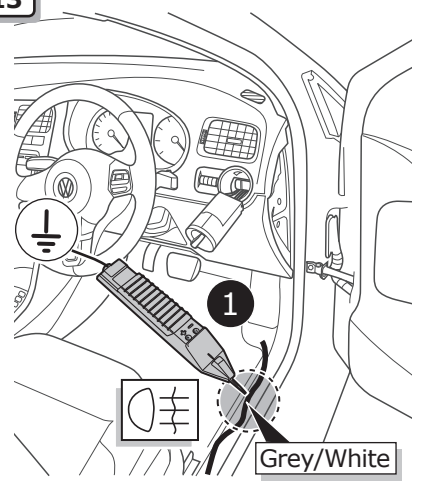


OPTION B for standard vehicles: fog lamp connection by relay


14

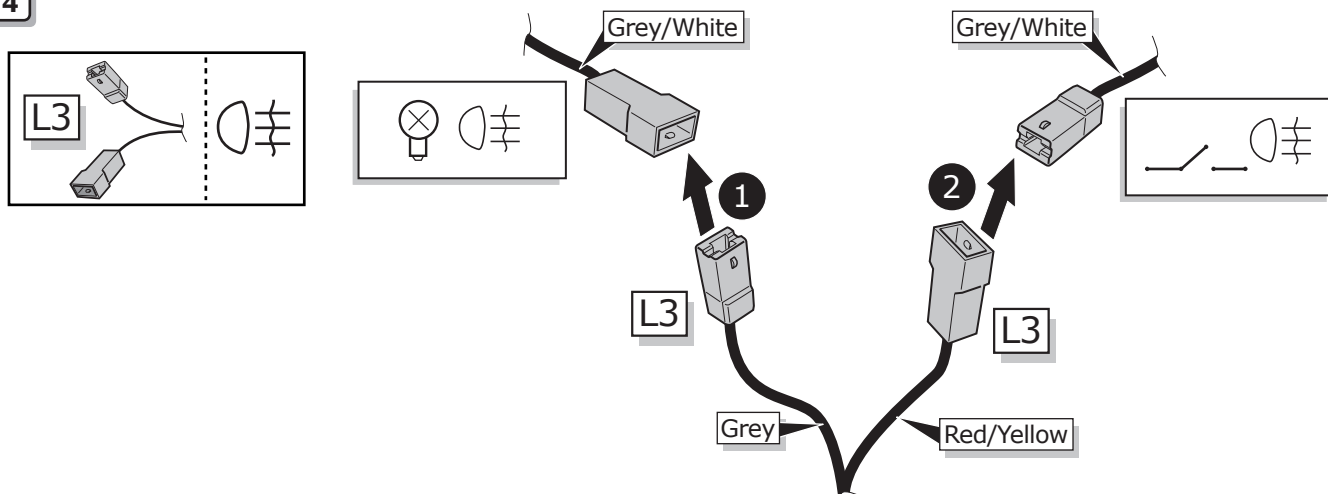


15

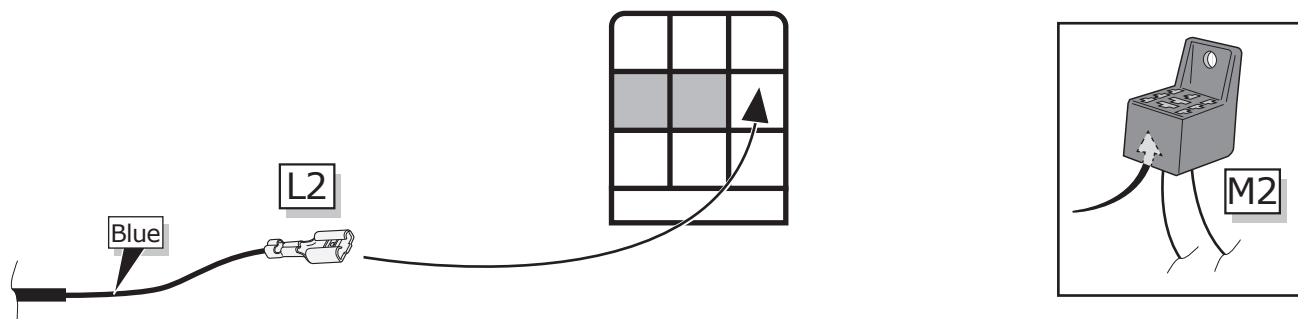


16

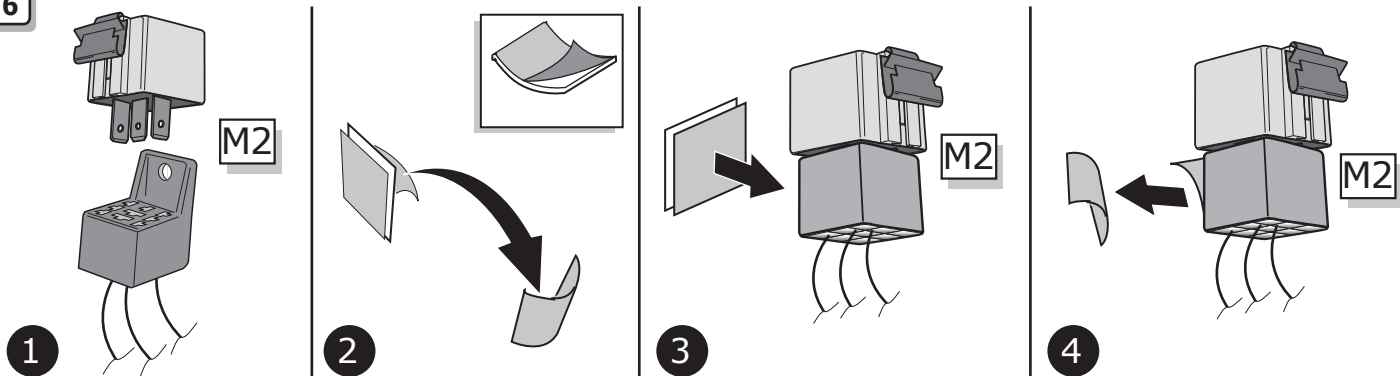


17

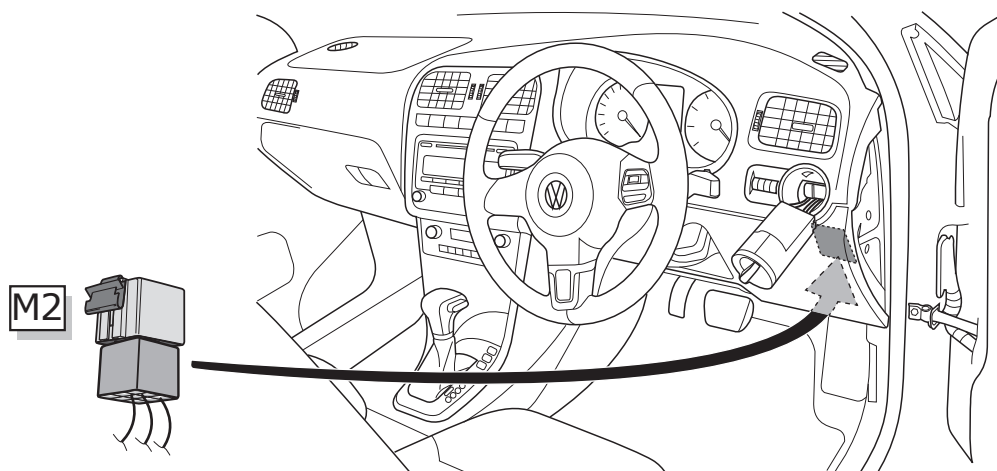


18

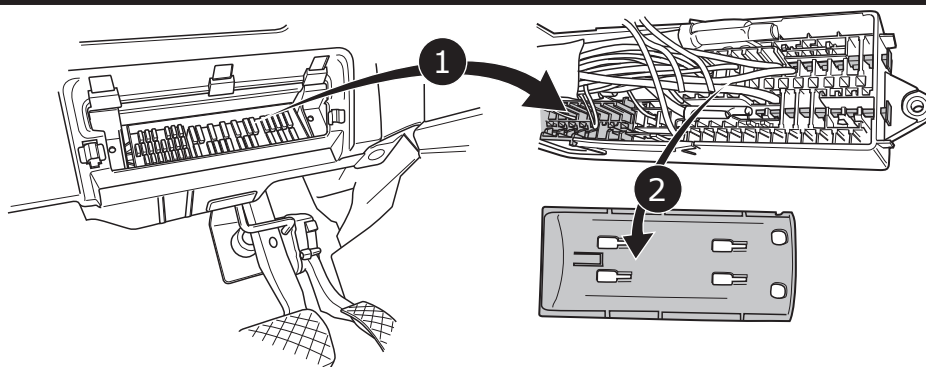


19

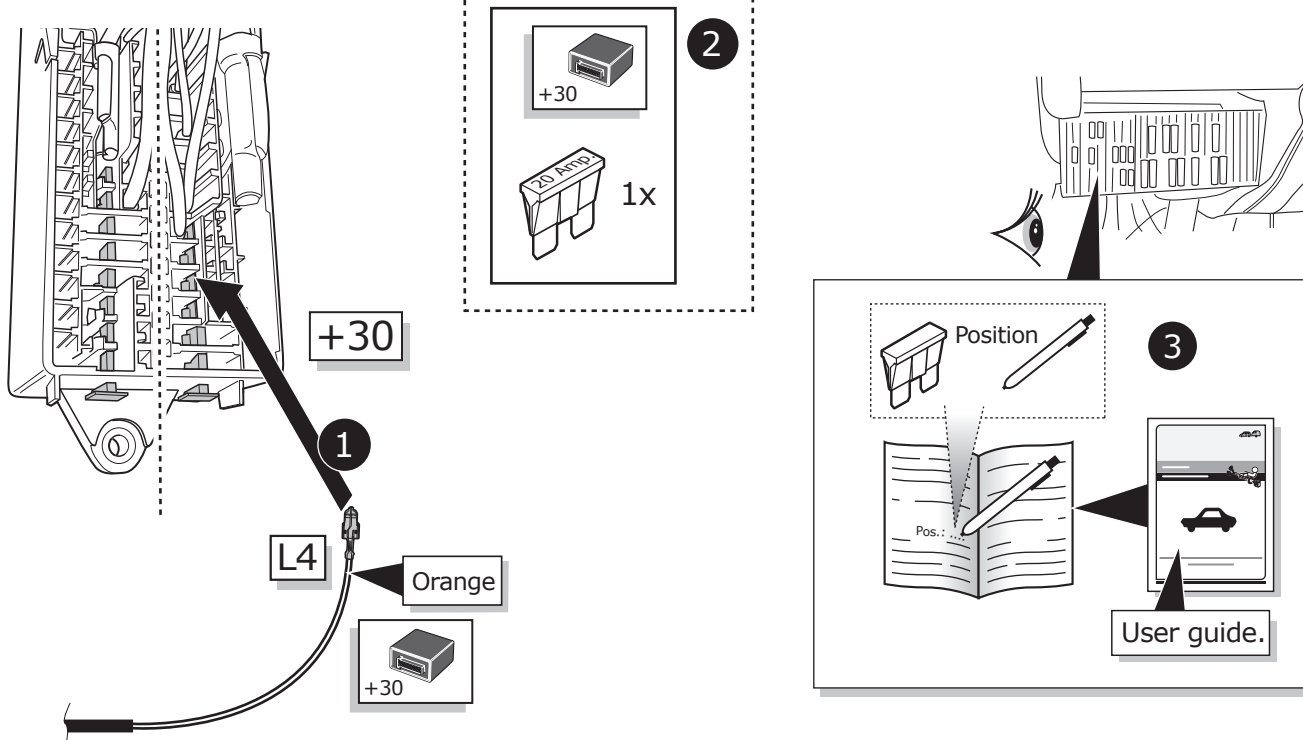


If Positions are taken:

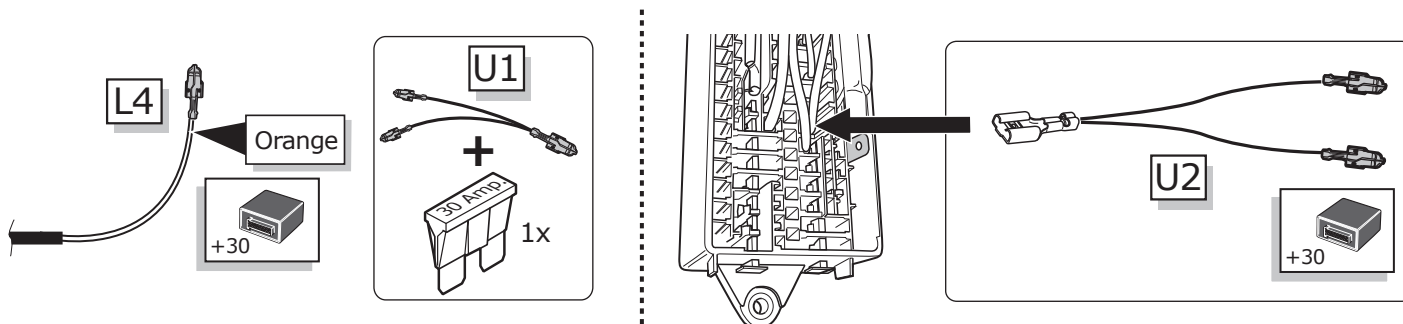


20

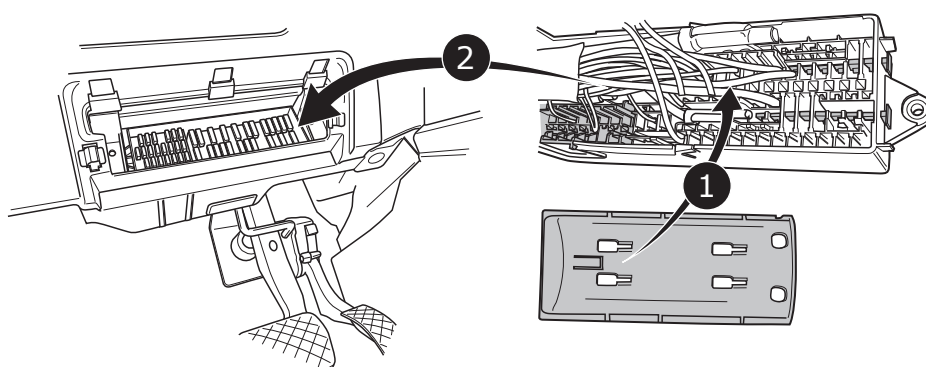


21

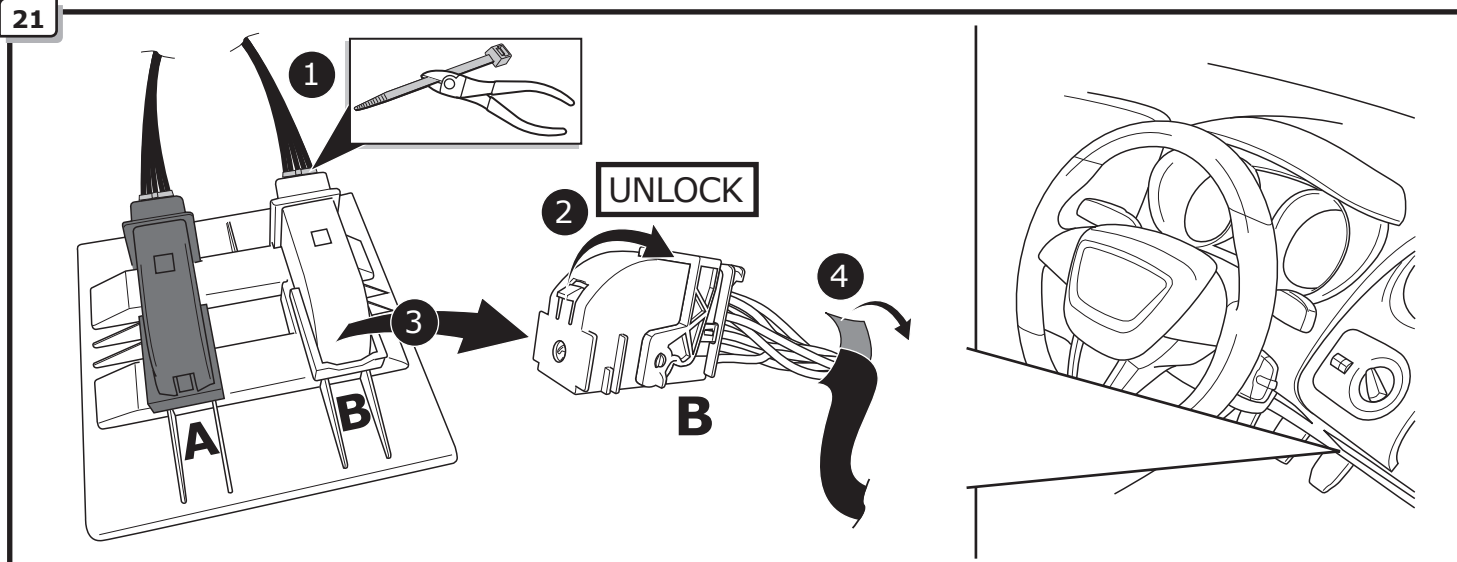


22

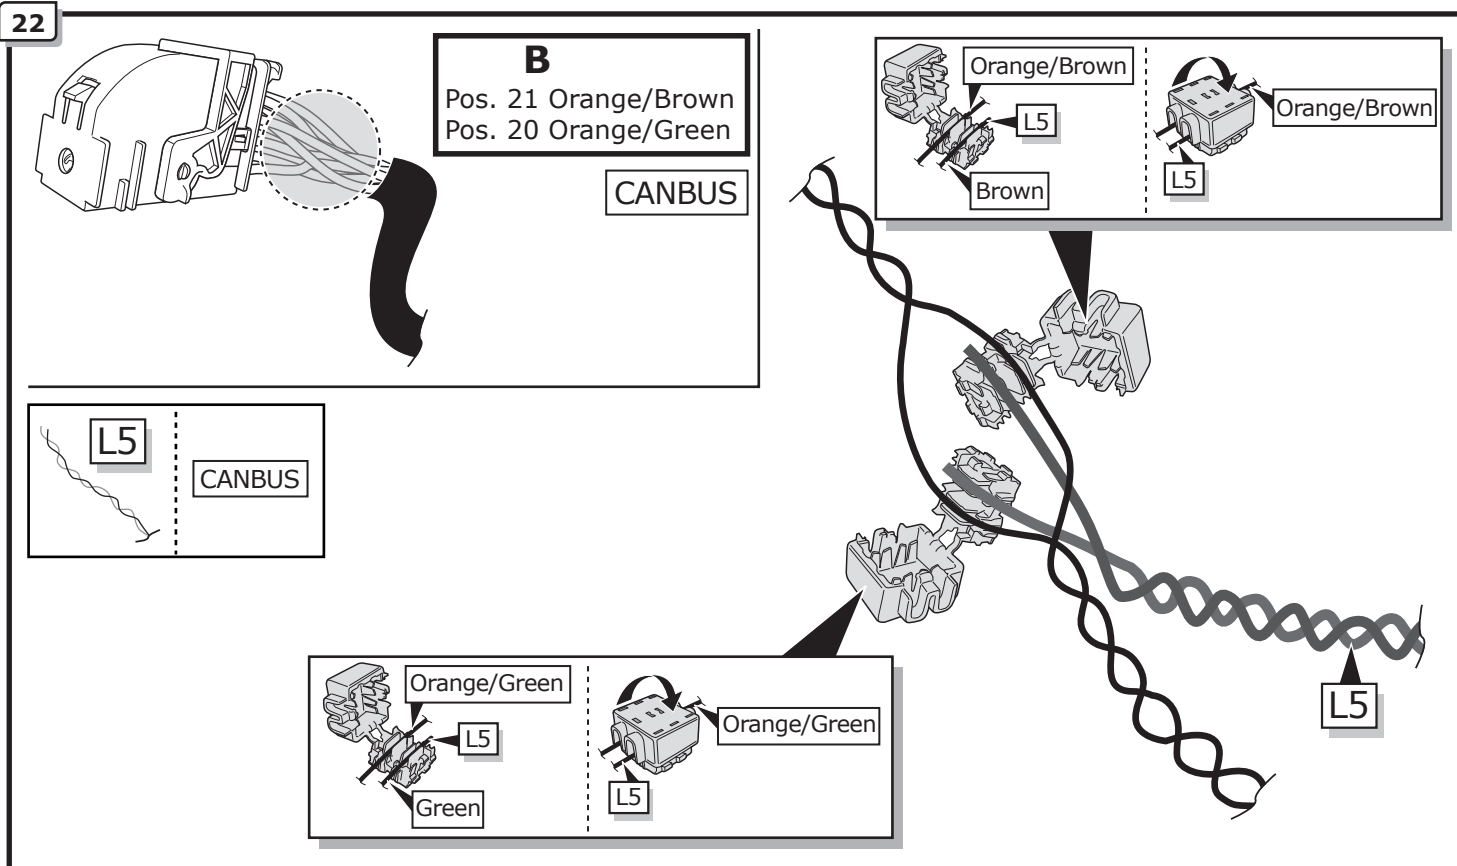


23

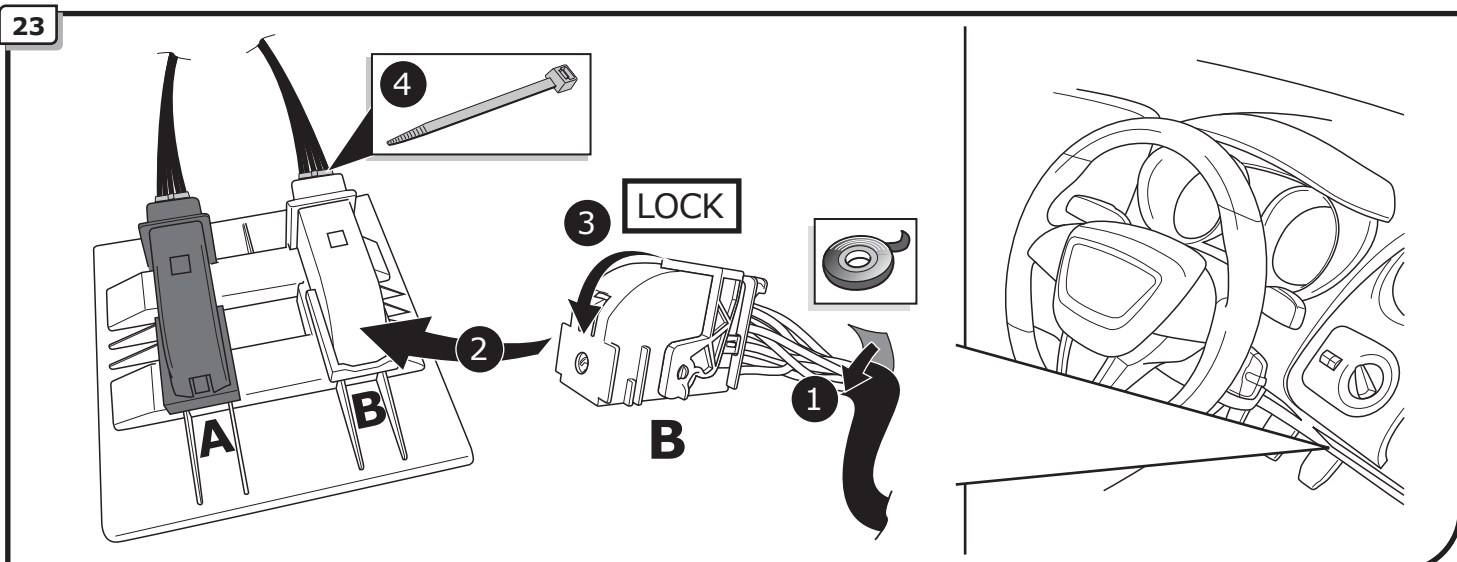


24

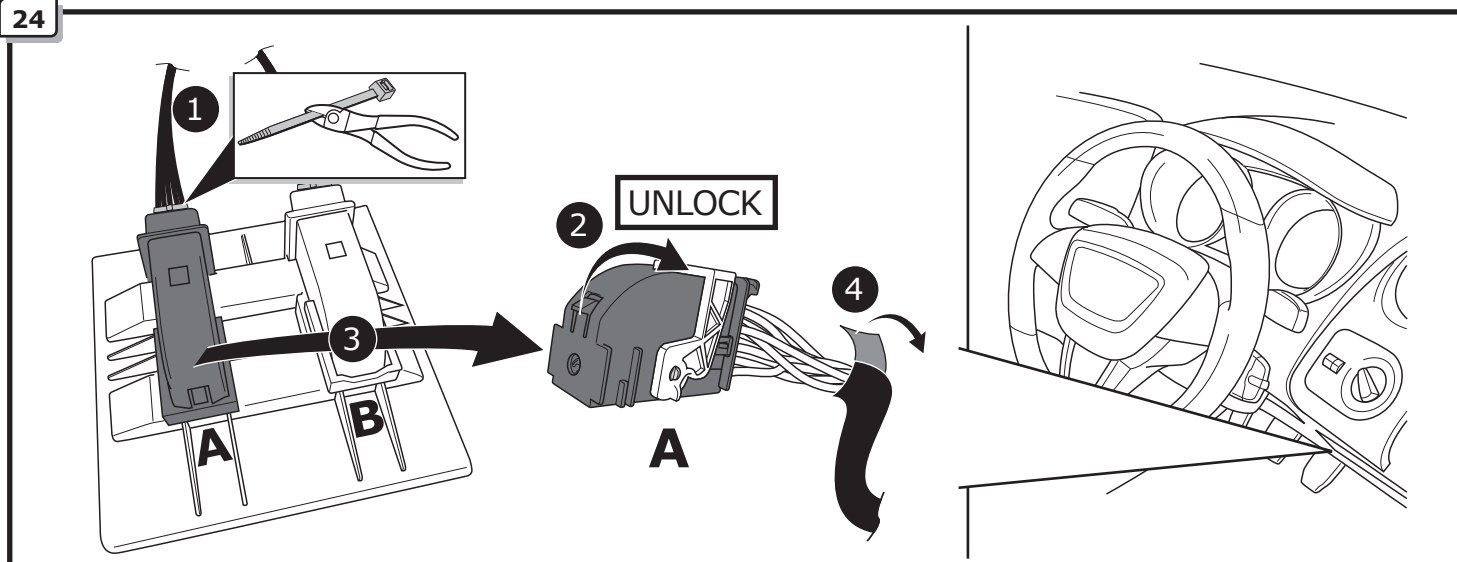


25

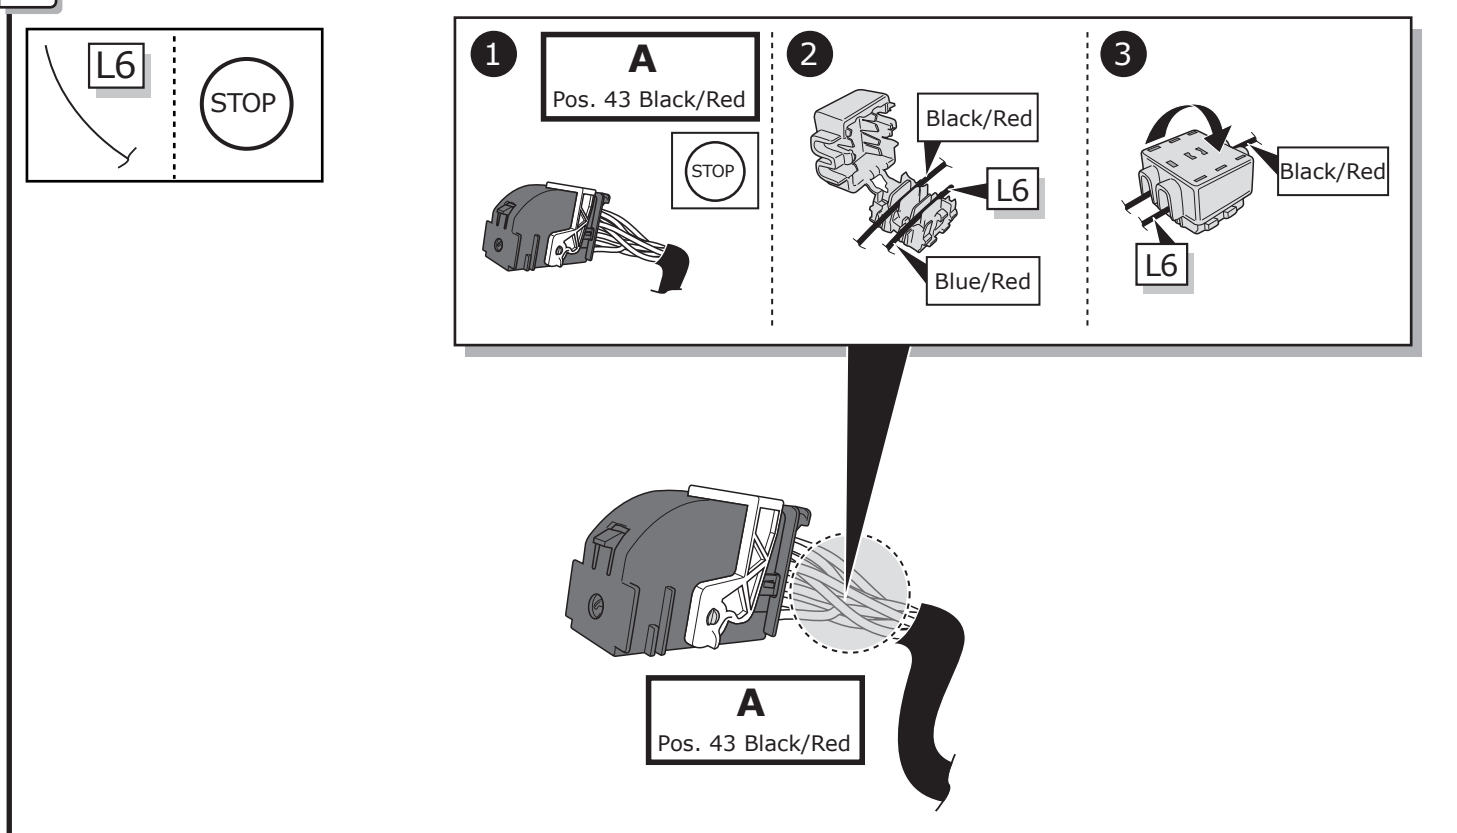

26

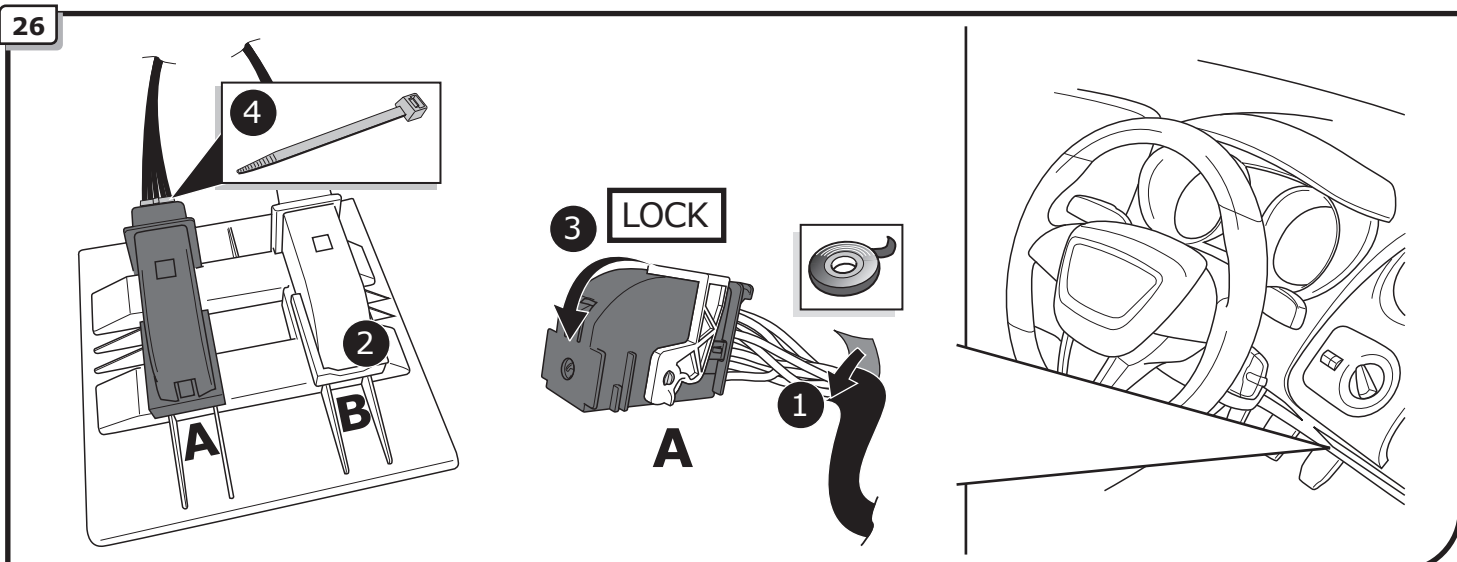

27

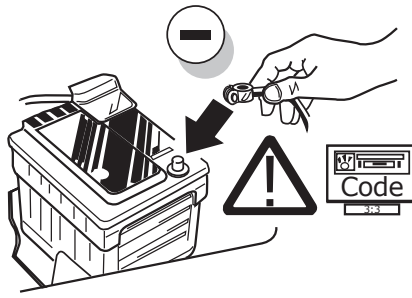

28

A VAG Service Tester must be used to code the vehicle's Gateway with the additional function for the towing hitch at the dealer.


29

! TEST ALL THE CIRCUITS WITH A TEST DEVICE WITH THE CORRECT POWER LOAD FOR EACH FUNCTION. A TEST DEVICE WITH LED'S CANNOT BE USED FOR THIS PURPOSE.

INFO

REINSTALL TRIM.

30

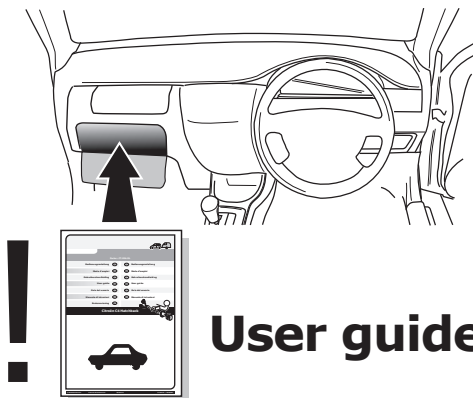


User guide




SOCKET CONNECTION

DIN/ISO 1724			 1-7				
	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L
Pmax	21W	21W		21W	42W	3x21W	42W
Colour	Black/ White	Blue	Brown	Black/ Green	Grey/ Red	Black/ Red	Grey/ Black


⚠ MAX = 21W

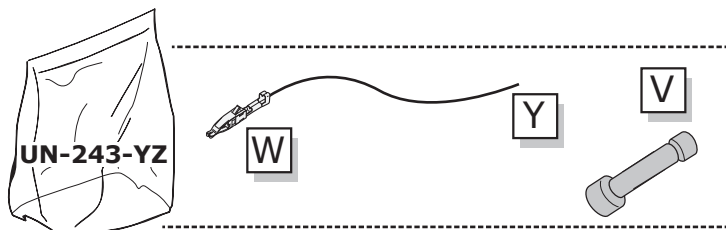


A

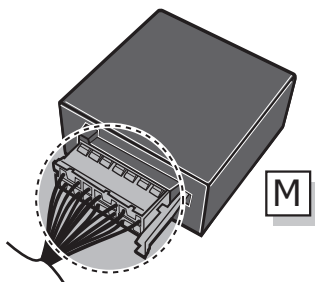


1

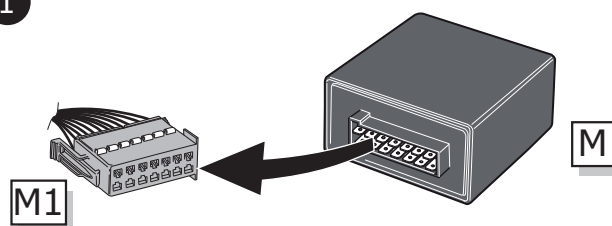


2

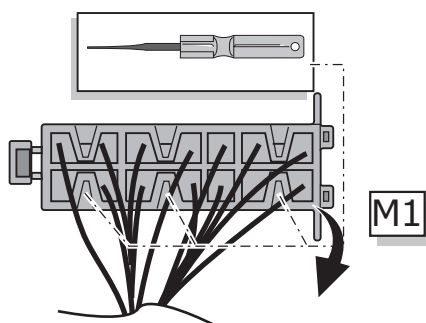


3

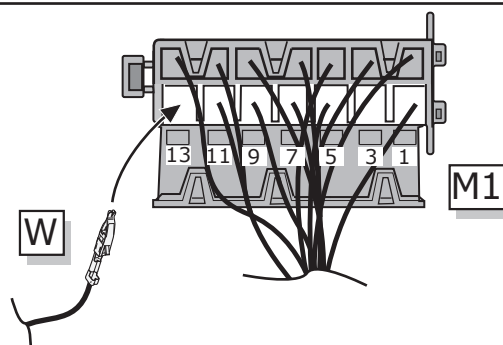

4

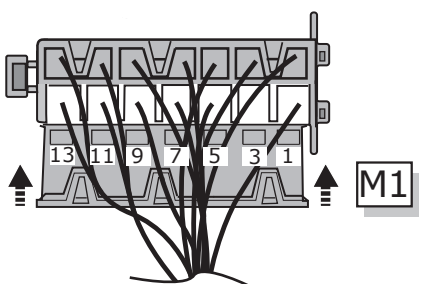

5

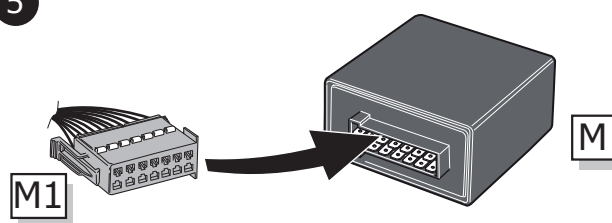

B

⚠ MAX = 21W

