



PEUGEOT	
207 Hatchback	05/2006 >>
207 SW	07/2007 >>
207 CC	03/2007 >>
307 Hatchback	07/2005 >>
307 SW	07/2005 >>
307 CC	07/2005 >>
308 Hatchback	09/2007 >> 08/2013
308 SW	05/2008 >> 04/2014
308 CC	06/2009 >>
3008	06/2009 >> 09/2016
407 Saloon	05/2004 >>
407 SW	09/2004 >>
407 Coupe	10/2005 >>
5008	10/2009 >> 02/2017
807	11/2005 >>
Expert	02/2007 >> 06/2016
Partner	05/2008 >>

CITROEN	
C2	10/2005 >>
C3	10/2005 >> 11/2016
C3 Pluriel	10/2005 >>
C3 Picasso	03/2009 >> 08/2017
DS3	03/2010 >> 06/2018
DS3 Cabriolet	03/2013 >> 06/2018
C4 Hatchback	11/2004 >> 10/2010
C4 Coupe	11/2004 >>
C4 Picasso	03/2007 >> 08/2013
C4 Grand Picasso	08/2006 >> 12/2013
C5 Hatchback/ Estate	10/2004 >>
C6	01/2006 >>
C8	11/2005 >>
Dispatch	01/2007 >> 06/2016
Berlingo	05/2008 >>

LANCIA	
Phedra	11/2005 >>


FIAT	
Ulysse	11/2005 >>
Scudo	01/2007 >>

TOYOTA	
Proace	04/2013 >> 01/2016

Part No: PE-074-13MU

Electric wiring kit for towbars / 13-pin / 12 Volt / ISO 11446

Product overview

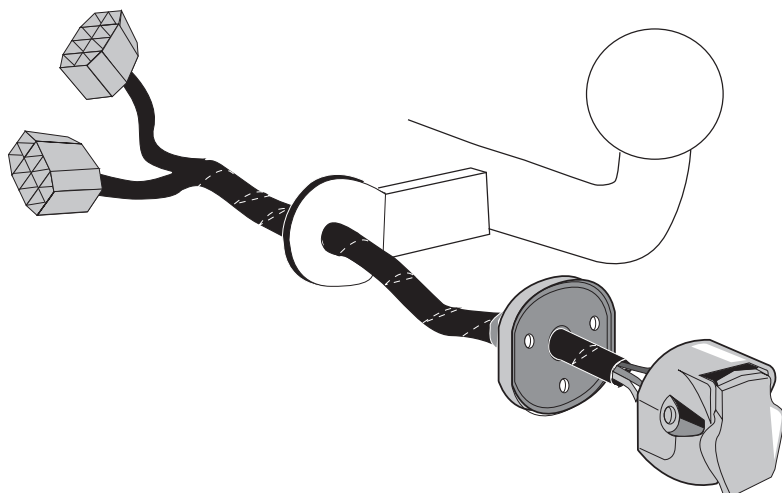

IMPORTANT!

This electric kit has to be installed by a professional workshop or a suitable qualified person.

The installation instructions must have been read and fully understood before the start of any installation. Please contact your wiring kit provider or the hotline shown in the footer should you need assistance!

Make sure the vehicle is approved/homologated by the manufacturer to tow a trailer!

Also please check that there is a definite compatibility between this vehicle and the electric kit!

Following the installation of the electric kit, the fitting instructions should be kept together with the vehicle service document and vehicle handbook. The fitting instructions contain important information relating to the use and function of the towing kit as well as for any diagnostic or activation process, that might have to be repeated in the future (e.g. after the performance of a vehicle software update).

All warranty claims will be forfeited if the electric kit or components contained therein are used incorrectly or modified. If a towing socket adaptor has been used to connect to the trailer or bike rack, this must be removed from the trailer socket once the trailer or bike rack has been disconnected.

If the trailer or bike rack is not equipped with a rear fog lamp, depending on the towing vehicle type, the correct function of the towing kit cannot be guaranteed. In such cases, a rear fog lamp should be retro fitted.

This towing electric kit will not be covered under warranty if any technical or electrical modifications or software updates have been performed by the vehicle manufacturer after the initial commissioning of the kit. That applies especially to modifications or updates which may cause malfunctions in the trailer socket or any other part of the trailer electrical equipment!

Depending on the type of trailer module used in this electric kit, diagnostic interrogation with the vehicle's electrical system may be limited or will not function. The error memory inside the trailer module may not be able to be accessed by vehicle manufacturers diagnostic system.

Error logs relating to the trailer electrical equipment, that may be generated in the vehicle manufacturers diagnostic system as a result of a test procedure, may be due to the incorrect installation of the towing electric kit or the false activation of the trailer module.




We always recommend whenever possible, the following troubleshooting process:

- An analysis of the vehicle's error memory and possibly clearing of all faults before the start of the installation!
- Try disconnecting the trailer module from the towing harness and re-start the fault clearing process!
- If in doubt, limit the time for troubleshooting to a max of 0,5 hours and call our Technical Support Team!


Please follow our instructions carefully and always test the towing electrics using a true lighting board or a specifically designed bulb tester. If an LED tester is used, ensure it is equipped with correct load resistors or malfunctions will occur!

This instruction is subject to changes and we reserve the right to make changes to design, colour etc.

All of the data and illustrations may not be an exact representation but the text contained in this instruction must be observed!









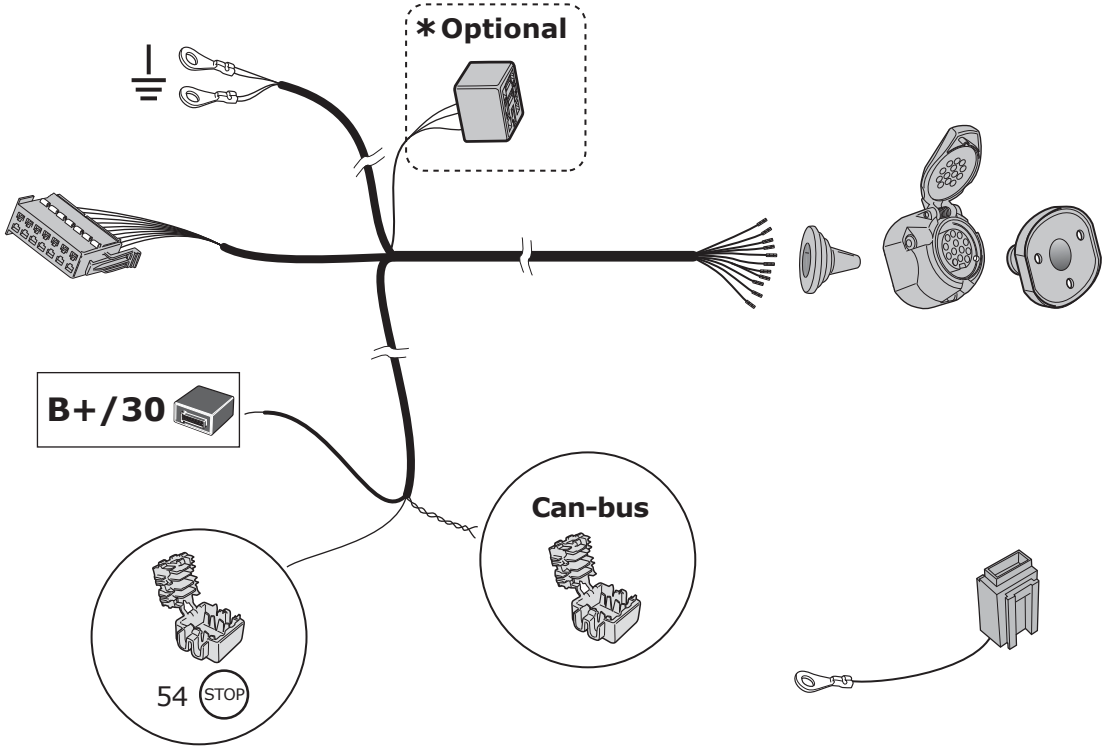
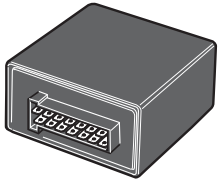
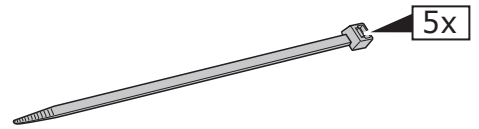


Optional

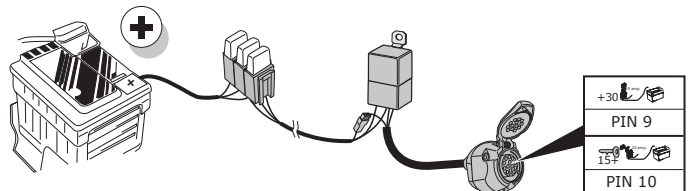

**Extension kit
UV-005-ZZU**

Consult your supplier.

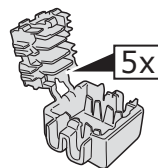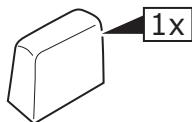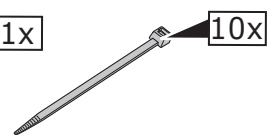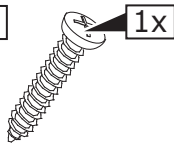

Optional



Consult your supplier.




Trailer Simulator for 7- and 13-pin Sockets


1

Optional

Adapter socket

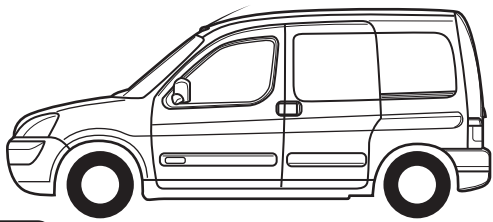


13-pin

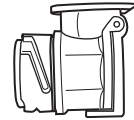


7-pin

ECS part no.
SP-122-ZZU

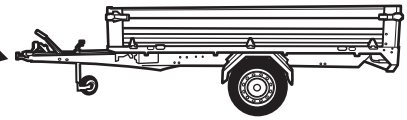

2

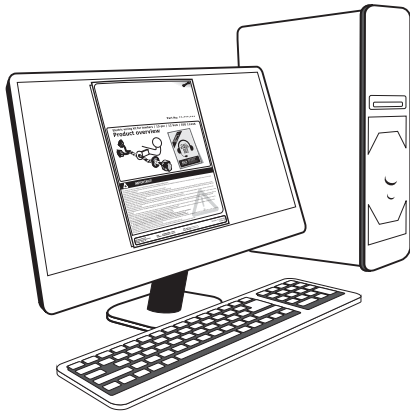


Fitting Instructions




Download

from

www.ecs-electronicsuk.co.uk

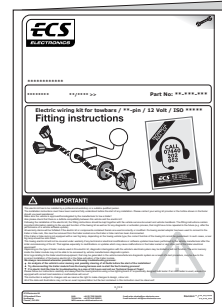

3

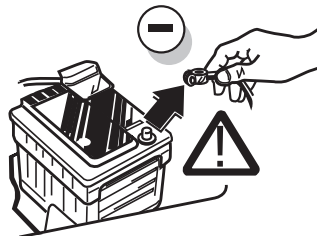


Note: It may be necessary to check if this vehicle has a stored radio code before disconnecting the battery!




4

B+/30 




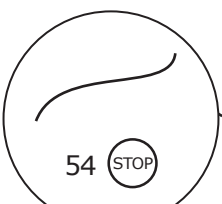


Option 2

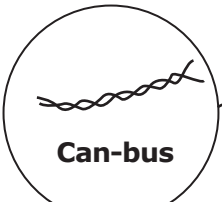


Option 2


B+/30 

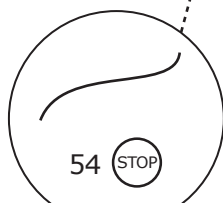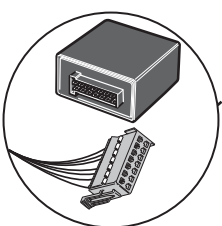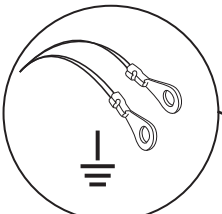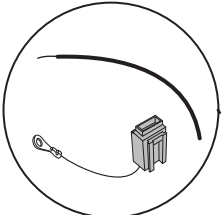

Option 1

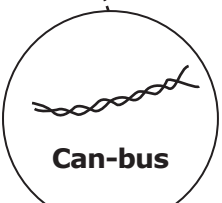

Option 1

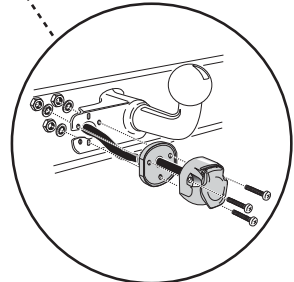

5